

# Hotronix® AIR-FUSION™

**40x50 cm**


## OPERATOR'S MANUAL



# Table of Content

Machine View	2
Safety Instructions	3
Touch Screen Guide / Connecting the System	4-5
Hotronix® Air Fusion™ Operating Instructions	6-17
Start Up / Shut Down	6
Print Screen	7-8
Passwords	9
Preset Setup	10-11
Date & Time Setup / Display Setup	12
Display Setup cont. / Auto On nd Off Setup	13
Auto On nd Off Setup cont. / Password Setup	14
Language Setup / System Setup	15
System Setup cont.	16
Prepare to Print	17
Parts Replacement List	18
Parts Location Guide	19-20
Hotronix® Air Fusion™ Electrical Schematic	21
CE-Certification	22
Terms of Guarantee	23



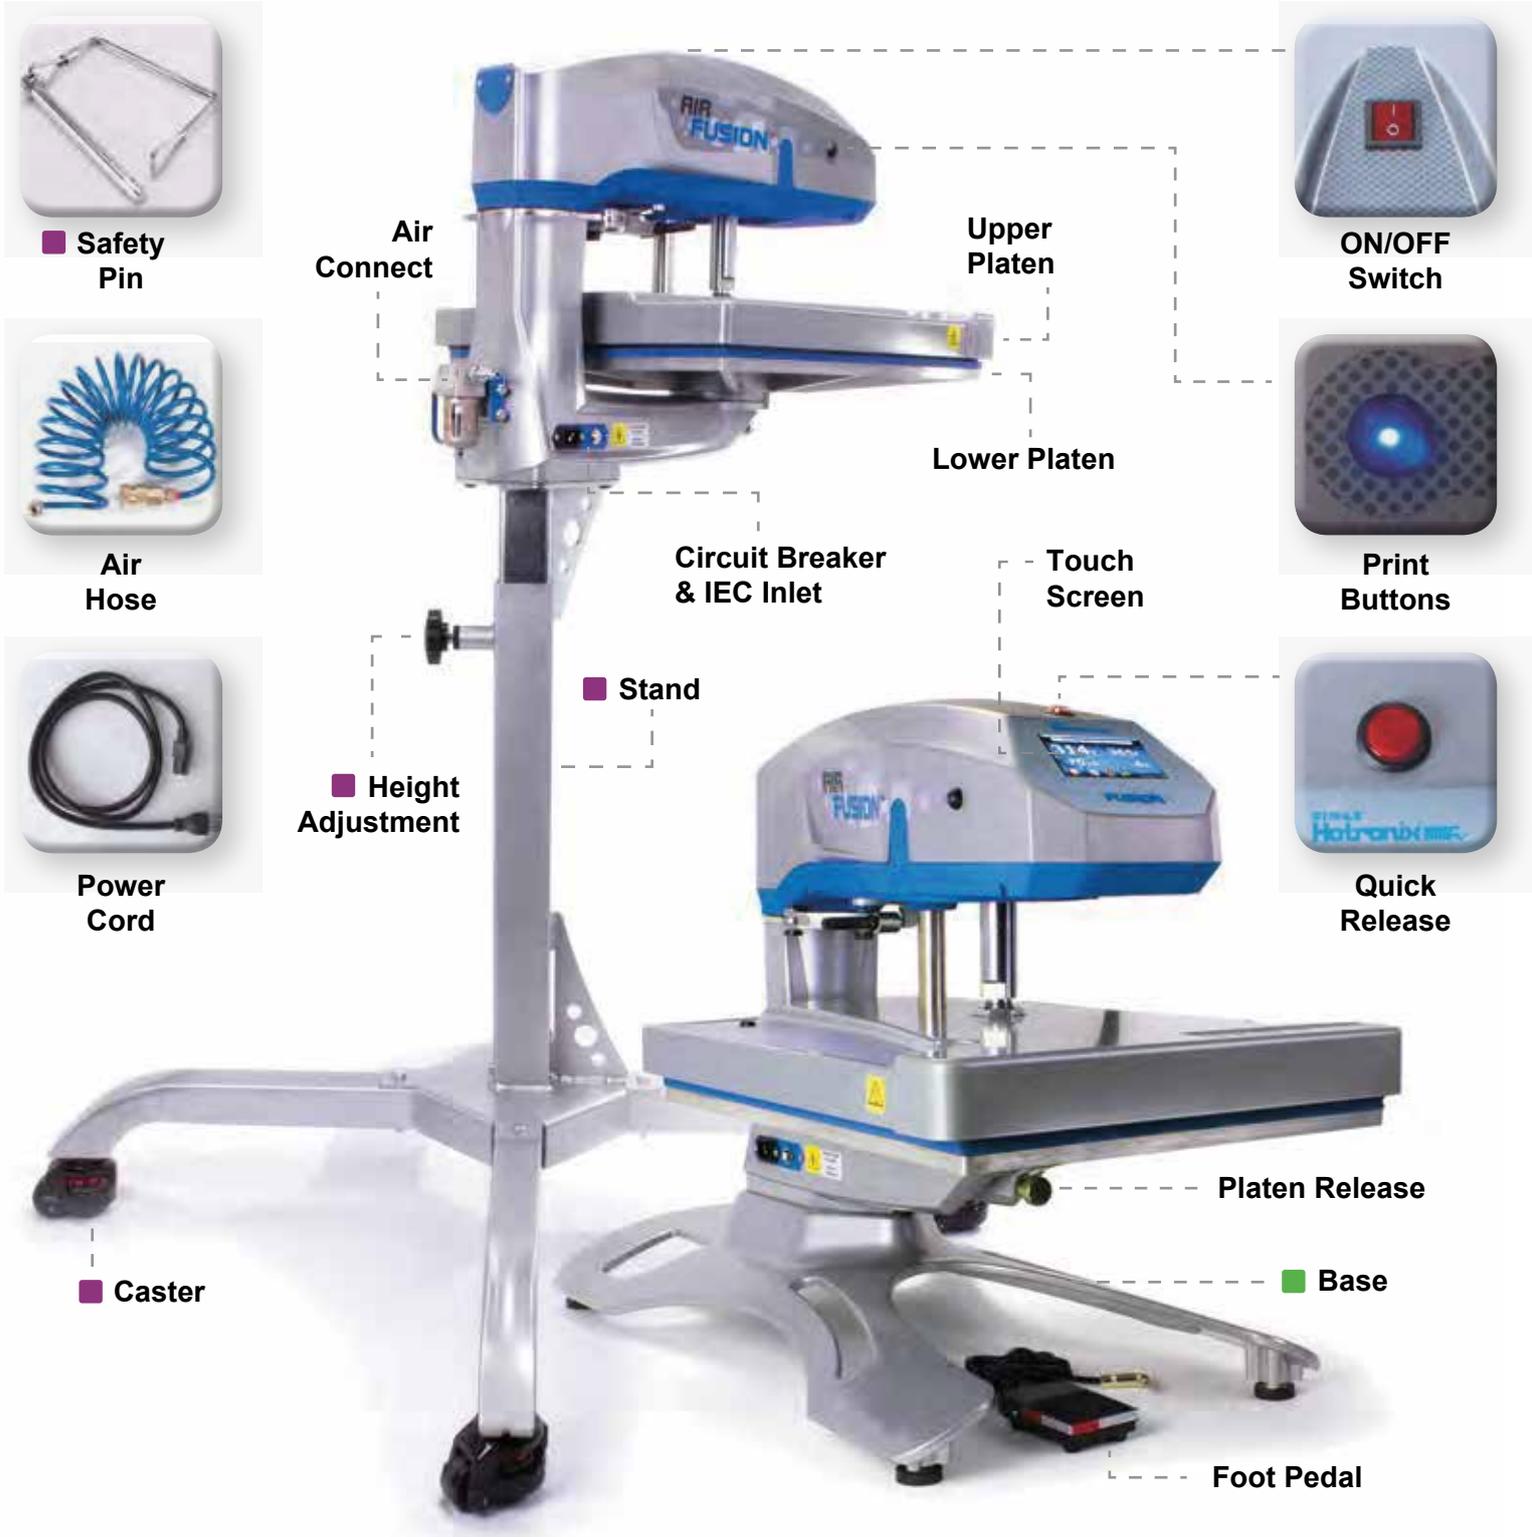

■ Stand Model Only

■ Table Top Model Only

## Important Safety Instructions

WHEN USING YOUR APPLIANCE, BASIC PRE-CAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

Read all instructions.

Use appliance only for its intended use.

To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.

Never pull cord to disconnect from outlet, instead grasp plug and pull to disconnect.

Do not allow cord to touch hot surfaces, let appliance cool completely before putting away.

Do not operate appliance with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance, take it to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.

Close supervision is necessary for any appliance being used by or near children.

Do not leave appliance unattended while connected.

Burns could occur from touching hot metal parts.

To reduce the likelihood of circuit overload, do not operate another high voltage appliance on the same circuit.

If an extension cord is absolutely necessary, a 20 ampere rated cord should be used.

Cords rated for less amperage may overheat, care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

**SAVE THESE INSTRUCTIONS.**

## ■ Navigation

Most screens have a Cancel or Back button to close the current screen without saving any changes and will return the user to the previous screen. (Fig.1)

Some screens may present a list of items. When the list of items is larger than can be displayed on a single screen a left and/or right arrow appears on the left or right side of the screen. A user can scroll through the list by making a sweeping gesture across the screen, either left and/or right, as indicated by the arrows. The user must be touching the screen for the gesture to be detected. Very fast and very slow gestures may not be recognized. (Fig.1)



Fig.1

## ■ Editing

Editable fields may be displayed in an Edit Box. An Edit Box typically overlays the screen and presents field(s) and/or control(s). Edit Boxes typically do not have a Back or Cancel button. The Edit Box can be closed by touching the screen anywhere outside the Edit Box. A Save or Enter button maybe displayed in an Edit Box. Closing the Edit Box without pressing the Save button will result in the loss of your changes. (Fig.2)

In addition to editable fields, an Up/Down icon may be provided to increase or decrease values. The Up/Down icon (in most cases) can be held down to automatically increase or decrease the value. (Fig.3)



Fig.2

## ■ Keyboard / Keypad Display

The Keyboard/Keypad display is used for data entry purposes. The Keyboard/Keypad can be used to enter text or numeric data when required. The Keyboard/Keypad provides function keys for Cancel, Enter and Backspace/Clear (“<”) keys. Also, a mode key may be present between the Cancel and Enter key. The mode key allows the user to switch between upper and lower case letters and numeric and other characters that may be entered using the Keyboard/Keypad. (Fig.4)

Typically, the current value is displayed in the Keyboard/Keypad value display at the top of the screen. Use the Keyboard/Keypad to change the current value. Use the Enter key to accept the change or the Cancel key to exit without accepting the change to the current value. (Fig.4)

The Keyboard/Keypad display is also used for password entry. Password characters will be displayed with “\*” in place of the password value.



Fig.3

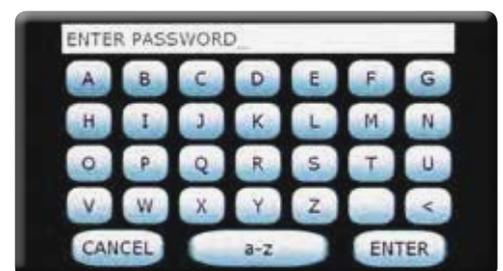


Fig.4

## ■ Menu Selection

The available Menu Screens are displayed as icon images on the screen. Touch and release the icon to open the desired Menu Screen. (Fig.5)



Fig.5

## Connecting the System



1.1

### Connecting the System

Connect the power cord into the IEC inlet located in the back of the Press. Connect the opposite end of the cord into a properly grounded electrical outlet with a sufficient amperage rating. (1.1)

### Voltage

220 Volt - A full 10 amp grounded circuit is required for 220 volt operation.

### Extension Cords

If used, extension cords should be as short as possible and not less than 12 gauge. Heavy duty cords are recommended.



1.2

### Circuits

Circuits that have less than 15 amps or that have other high demand equipment or appliances (especially more than one heat press) plugged in, should not be used.

**Note:** manufacturer, its service agent or a similarly qualified person in order to

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard. Use SJT type rated 300 V cord for replacement.

### Connecting the Air Compressor

Connect the Air Hose (provided) from your air compressor into the Air Connector located on the back of the press. (Fig. 1.2)

### Note:

Air compressor must be ½ hp compressor or larger, 2.3 cfm, with a 2.5 gal. tank minimum. If the compressor is not connected properly or the pressure is turned off, the Air Fusion™ will warn you with this icon. (Fig. 1.3)

Press the icon when air pressure is restored.



1.3

**CAUTION:** Failure to follow these instructions will cause:

1. Erratic controller functions.

2. Inaccurate displays and slow heat-up.

3. The circuit breaker to disengage.

## Start Up / Shut Down

1. To start your Air Fusion™ heat press flip the Power Switch to the “ON” Position.



2.1

The power switch is located on the top of the control housing. (2.1)  
During the startup, a splash screen is shown for approximately seconds. This screen displays the Hotronix® logo and current software version. (2.2)



2.2

2. To turn your Air Fusion™ Press off, select the “Shut Down” button on the operation screen. (2.3)



2.3

**Note:**  
When the heat platen is above 100°F (38°C), the current platen temperature is displayed on an orange background as a warning, indicating that the platen is still hot. (2.4)



2.4

During this time, the Shutdown operation can be exited by simply pressing the start button displayed on the touch screen (2.4). The system will exit the Shutdown screen and return to the Main Menu. (2.5)



2.5

Once the platen has cooled below 100° F (38° C), a screen saver will display, showing the Stahls Hotronix® logo and START button. (2.6)



2.6

### Note:

The Hotronix® Air Fusion™ is equipped with an Auto Sleep Mode. When the machine is not in use for a period of four hours, it will enter an energy saving sleep mode. To restore to normal operating mode, press the start button located on the touch screen and allow the heat press to return to the target temperature.

## Print Screen

The Print Screen is the first screen displayed after the splash screen and start up has completed. This screen provides all the printing functions.

### ■ Presets

Saved Presets are displayed at the top of the Print Screen. These are pre-programmed heat application settings that allow you to quickly and accurately change your print settings for specific materials. The example shown is a preset named "Preset 1" with a first timer of 4 seconds, a target temperature of 320°F, and a platen pressure of 50psi. (3.1)



3.1

- To select a new application setting, press the preset bar at the top of the Print Screen. (3.1)  
A pop up menu with all of the optional presets will be displayed. (3.2)

#### Note:

If there are no Presets pre-programmed on your system, the Preset menu will be blank. To edit, delete or create new presets, see 'Preset Setup' on pages 11 and 12.



3.2

- Press your desired preset and select the "ACCEPT" icon to continue. (3.3)

The system will automatically return you to the Print Screen showing your new preset settings. (3.4)

#### Note:

You can "Override" your current heat application settings to fit any material desired. See "Target Settings" below.



3.3

### ■ Target Settings

Your target Temperature, Time and Pressure settings are displayed as shown. (3.4). These settings may be overridden.

#### Note:

when changing a Target Setting, the Preset display name at the top of the screen will change to "Override" to indicate the Preset has been manually changed.



3.4

- To change your Temperature Settings, press the Target Temperature display located on the right side of the print screen. A pop up menu will be displayed. Press the blue or red temperature icons to decrease or increase the temperature (press and hold to change values faster). (3.5)

#### Note:

The temperature can be set from a range of 32°F (0°C) to 430° F (221°C).



3.5

## Print Screen Cont.

### Target Settings Cont.

- To change your **Time Settings**, press the Target Timer display located on the right side of your print screen. A pop up menu will be displayed. Press the minus or plus icons to decrease or increase the time (Press and hold to change values faster). (3.6)

**Note:**

The time can be set from a range of 1-999 seconds

- To change your Pressure Settings, press the Target Pressure display and a pop up menu will be displayed. Press the down or up arrows to decrease or increase the pressure (Press and hold to change values faster). (3.7)

**Note:**

The pressure can be set from a range of 20psi (1.4bar) to 120psi (8.3bar).

- **Actual Readings**

The Actual Temperature and Pressure readings are displayed on the left side of the Print screen. These are the current heat press readings. (3.8)

- **Job Counter**

The Job Counter counts the total number of complete print cycles performed using the current Preset or Override settings. Exiting the Print Screen or changing the Preset will reset the Job Counter to 0. Changing an Override setting does not reset the Job Counter to 0. (3.9)

- **Power Button**

Use the Power Button to perform system shutdowns. (3.9)

**Note:**

See "Start up / Shut Down" on page 7.

- **Setup**

The Setup menu allows you to edit and create Presets, program the Date and Time, change your display units (F°/C° and psi/bar), set your Auto On/Off functions and more. A password is required to enter the Setup menu. The system supports two levels of passwords: "User" and "Manager". Features of the Setup menu are limited by the password level entered. (3.10)

**Note:**

See "Passwords" on page 10.



3.6




3.7



3.8



3.9

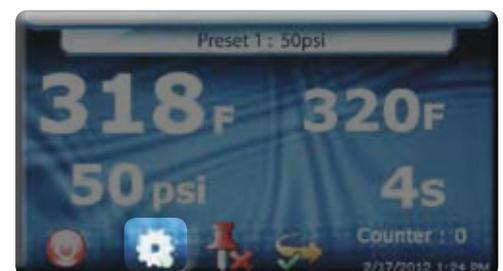

3.10

## Print Screen cont.

### ■ Tack Mode

When Tack Mode is enabled, the platen is lowered as long as both print buttons are pressed and held.

Touch the tack button to toggle the Tack mode. A green check mark indicates the Tack Mode is enabled. A red X indicates that Tack Mode is disabled. (3.11).

### ■ Auto Swing Mode

With Auto Swing Mode enabled, your Air Fusion™ will automatically swing away after heat application.

Touch the auto swing button to toggle the Auto Swing Mode. A green check mark indicates Auto Swing Mode is enabled. A red X indicates the Auto Swing Mode is disabled. (3.11)



3.11

### Note:

See “Prepare To Print” on page 18 for further details.

## Passwords

A password is required to access the Setup Menu and configure certain functions of the Hotronix® Air Fusion™. The system supports two levels of passwords: “User” and “Manager”. The User Level password provides access only to the Preset Setup, Date & Time, Display, and Auto On/Off Setup screens. The Manager Level password provides access to the Preset Setup, Date & Time, Display, Auto On/Off, Password, Language and System Setup screens.



4.1


In the Print Screen, press the Setup icon. (4.1)



4.2

Then press the Setup icon again. (4.2)

A keypad will be displayed. Enter the letter “U” for a user level password or “M” for a manager level password (4.3)

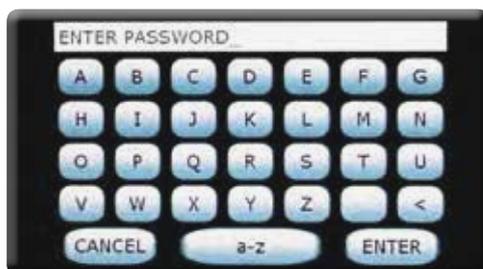

4.3

### Note:

we will continue under a “User Level” password.

Press Enter when complete. If an invalid password is entered, simply repeat the previous step. (4.4)



4.4

**Note:** You can Select the Cancel button to exit the Password Entry screen and return to the previous screen at any time.

Now you will be automatically entered into the Setup Menu where you will have access to the Setup functions. (5.1)

## Preset Setup

- After your password is entered in the setup menu, press the Preset Setup icon. (5.1). This option will allow you to edit, delete, and create new Presets. A preset can have:

- 1 Preset Name
- 1-4 Timer values each with a range of 1-999 seconds
- 1-4 Platen Pressure settings each with a range of 20 -120psi (1.4 - 8.3bar)
- 1 Temperature value with a range of 32 - 430°F (0°- 221°C)



5.1

- To create a new Preset:



5.2

Press the NEW button on the preset setup screen (5.2).

First, give the Preset a name by selecting the Preset Name field. (5.3)



5.3

A keypad will be displayed. (5.4)



5.4

Type in the name of your new Preset and Press ENTER when finished. (5.4)

Repeat the same process for your new Preset Timer, Pressure, and Temperature fields.



5.5

If desired, you can also change the Pressure and Temperature units here by pressing the F or C (Fahrenheit/Celsius) and psi or bar icons on the right side of your screen. (5.5)

Press the SAVE button when finished. (5.5)




5.6

**Note:**

if you receive an error message after saving, select the Error message. (5.6)


A Preset Error menu will display, informing you of any changes needed. (5.7)

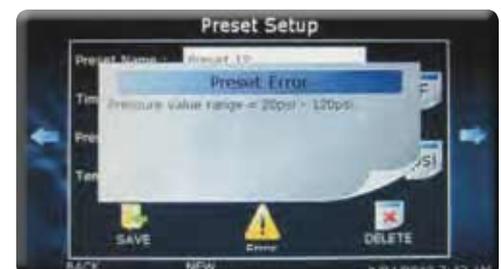

5.7

A common error is when the amount of Timer fields entered (1-4) does not equal the amount of Pressure fields entered (1-4). For example, if you assign the Preset two Timer settings, it must have two Pressure settings. Press the yellow Error icon again to close the Error menu and make any necessary corrections. Press the SAVE button Again when finished.

## To Create a New Preset cont.

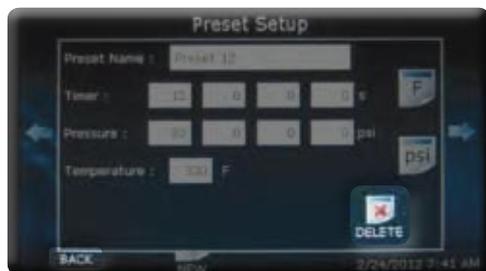

5.8

**Note:**

A DELETE button will appear after saving if you do not wish to save. (5.8)

Press the BACK button until you return to the Print Screen. The message “Saving Settings! Please wait...” will appear.



5.9

Press the Presets bar at the top of the Print Screen to select your New Preset. (5.9)



5.10

Locate and select your New Preset. (5.10)

Press ACCEPT. (5.11)

The Print Screen will now display your new settings.



5.11

■ **To edit an existing Preset:**

In the Preset Setup menu, press the name of the Preset you wish to change. (5.12)

**Note:**

If a blue arrow appears on your screen, this indicates there are more presets hidden from view. Slide your finger across the screen towards the arrow to view the rest of your Presets.

Select the desired field (Preset Name, Timer, Pressure or Temperature) that you wish to edit. A keypad will be displayed. Use the left arrow (<) to override the current name or value, then key in your new entry desired.

Press ENTER when finished (or X to cancel).



5.12

■ **To delete a Preset**

In the Preset Setup menu, Select the name of the Preset you wish to delete. (5.12)



5.13

Press the DELETE button. (5.13)

A pop up menu will appear. Press ACCEPT to continue or CANCEL to return to the Preset Setup page. (5.14)



5.14

## Date & Time Setup

- The Date and Time Setup feature allows you to program the Month, Day, Year, Hour and Minute (displayed in the lower right corner of the Print Screen).



6.1

To set the Date and Time, press the Date & Time button in the Setup screen. (6.1)

Press the "Month" field. (6.2)



6.2



6.3

Change the numeric value using the displayed Keypad, then press Enter. (6.3)

Repeat the same process to set the Day, Year, Hour and Minute. Select the AM/PM button to toggle between the AM/PM settings.



6.4

Press the SAVE button to save the new Date and Time settings. (6.4)

### Note:

It may take a few seconds for the Date and Time display to update on your screen.

Select the BACK button to return to the Setup menu. (6.4)

## Display Setup

- The Display Setup allows you to change your Temperature (Fahrenheit/Celcius) and Pressure (psi/bar) units.



7.1

To change your display units, press the Display button in the Setup screen. (7.1)

Press the Temperature field (F or C) to toggle between Fahrenheit and Celcius. (7.2)



7.2

## Display Setup cont.



7.3

Press the Pressure field (psi or bar) to toggle between psi and bar. (7.2)

Press the SAVE button to save your changes. (7.3)

Select the BACK button to return to the Setup menu. (7.4)



7.4

## Auto On and Off Setup

- The system can turn On or Off automatically when configured. The Auto On and Off feature is configured for each day of the week.




8.1

In the Setup Menu, Select the Auto On/Off Button. (8.1)

To configure an Auto On/Off setting, select the day of the week to be configured. (8.2)




8.2

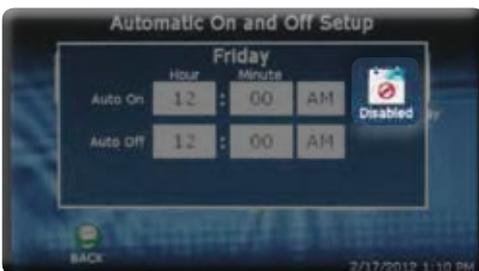

8.3

Use the Enable/Disable button to enable On/Off settings for the selected day of the week. (8.3)

**Note:** each day that you want the system to automatically turn On/Off, must be Enabled.

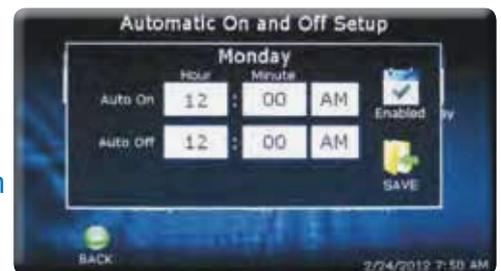

8.4


When enabled, set the time of day for Auto On and Off events by selecting the Hour and Minute fields. (8.4)



8.5

Using the displayed Keyboard/Keypad, enter the numeric time values and press ENTER. (8.5)

Use the AM/PM designator button to toggle between the AM or PM settings. (8.6)

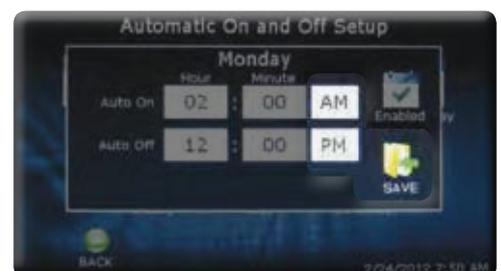


8.6

## Auto On and Off Setup cont.

Select the SAVE button to save the settings. (8.6)

**Note:**

Selecting another day of the week or exiting the Auto On and Off Setup screen without saving will result in loss of changes.

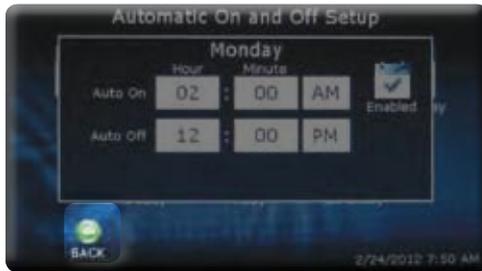

8.7

Press the BACK button to return to the Automatic On and Off Setup screen. (8.7)

**Note:**

You will see a green check mark for any day you have your Auto On/Off Enabled. (8.8)



8.8

## Password Setup („Manager Level“ Only)

- When logged in at a “Manager Level”, Passwords may be changed In the Setup menu. This will allow you to control who can access additional features in the Setup menu such as Passwords, Language and System Setup.



9.1

Press the Passwords setup icon in the Setup menu. (9.1)

Select the Password level (User or Manager) to be edited. (9.2)

A Keyboard/Keypad will be displayed. (9.3)



9.2



9.3

Type in your new Password and press ENTER when finished. (9.3)

**Note:**

Do not forget your new Password (s). It will be required for future logins.



9.4

Save any changes prior to exiting the Password Setup screen to prevent losing your changes. (9.4)

## Language Setup („Manager Level“ Only)

- When logged in at a “Manager Level”, the display Language may be changed in the Setup menu. Choose from eight languages: English, Deutsch, Espanol, Francais, Italiano, Japanese, Pyccko, and Chinese.



10.1

In the Setup Menu, Select the Language Button. (10.1)  
Press the icon of your Desired Language. (10.2)

**Note:**  
The selected icon will appear larger than unselected icons.



10.2

This example shows the Language “Espanol” being selected.



10.3

Once the desired language is selected press the Save button. (10.3)



10.4

The Air Fusion™ will automatically restart and return you to the Print Screen using the new Language display settings. (10.4)

## System Setup („Manager Level“ Only)

- When logged in at the “Manager Level”, system functions such as Internal Temperature, Fan Status, Power Save Status, Auto Swing, and Key Touch Frequency can be turned on, off, or adjusted in the Setup menu.

Press the System icon in the Setup menu. (11.1)

- Internal Temperature**

The current internal temperature reading of the system is displayed.

The system uses this temperature to determine when to activate the cooling fan when one is connected. (11.2)

**Note:**

The cooling fan will be activated when the internal temperature exceeds 125°F (50°C).



11.1

## System Setup cont. („Manager Level“ only)

### ■ Fan Status

Select the On/Off status display to toggle the cooling fan to the desired state On or Off. This is useful for testing the operation of the cooling fan. (11.2)

### ■ Power Save Status

With the Power Save Status turned on, the system will automatically shut down after 4 hours of inactivity to save power. The Power Save Feature can be turned On or Off by selecting the On/Off button. (11.2)

### ■ Auto Swing

The Auto Swing feature can be enabled/disabled using this control. With the Auto Swing feature turned off, you will also have the option to turn the foot switch on or off. (11.3)

### ■ Key Touch Frequency

When the user touches a control on the screen an audible tone is produced as a verification that a control was touched. The tone frequency can be changed by adjusting the Key Touch Frequency system setting. (11.3)

Use the plus / minus (+/-) buttons to adjust the frequency setting or select the field value to display a Keyboard/Keypad for editing the value. (11.4)

#### Note:

The value can be set in the range of 1 - 10000 Hz. (11.4)

After your new frequency value is entered, press the ENTER key. (11.4)

Press the SAVE button to save any changes, followed by the BACK button. (11.3)

Press the BACK button again in the Setup menu to return to the Print Screen.



11.2



11.3



11.4



11.3

## Prepare to Print

- To begin Printing/Pressing, start by verifying that you have the proper settings selected in the Print Screen:
  - Do you have the correct preset selected?  
**Note:** You may also manually adjust your desired Time, Temperature and Pressure settings (refer to Target Settings on pg 8-9).
  - Has your Actual Temperature Setting reached the Target Temperature?
  - Is your Actual Air Pressure the same as your Target Air Pressure.
  - Do you have your Tack Mode and Auto Swing Mode set to your desired settings?



12.1

When the desired settings are reached you may begin to Print / Press.

With the Auto Swing function enabled:

Swing the heat platen out by depressing the foot pedal. (12.2)

Position the garment and application. (12.3)

Swing the heat platen back into position by depressing the foot pedal again.

Press the Print buttons located on the side of the Air Fusion™. (12.4)

The platen will lower into the press position. The timer will automatically begin to count down, indicating the remaining time on the application.

**CAUTION:** When the Print cycle is complete, the top platen will return to the up position and automatically swing away.

If a second application is desired, repeat the previous step.



12.2



12.3

### Optional Pre-Press Tack Mode

With the Tack Mode enabled on your Print Screen, swing the heat platen out by depressing the foot pedal and position the garment and application. Press the foot pedal again to return the platen back into the ready-to-print position. (12.2 - 12.3)

When you are ready to print, press and hold the print buttons located on the side of the Air Fusion™. The top platen will lower into the Print position and will remain there until you release the buttons. (12.4)

**CAUTION:** Once the Print Buttons are released, the top platen will return to the up position.

To exit the Tack Mode, simply press the Tack Mode icon.







12.4







# Hotronix® Air Fusion™ Parts Replacement List



Item #	Part Name	Part #	Qty.
1	Control Housing	1-2197	1
2	Switch On/Off Lighted	1-2087	1
3	Switch, Quick Release	1-2270	1
4	Switch, Print - Blue	1-2271	2
5	Touch Screen Controller	1-2266	1
6	Control Housing Overlay	1-2198	1
7	Power Cord	2-1013-1	1
8	Upper Casting	3-1341	1
9	Base Casting	3-1340	1
10	Rocker Arm	1-2308	1
11	Main Swing Spindle	2-1670	1
12	Stop Plate	1-2284	1
13	Bearing Tapered Roller	1-2267	2
14	Bearing Cup	1-2268	2
15	Air Cylinder	1-2264	1
16	Heat Platen 16 x 20	2-1002-3	1
17	Heat Platen Cover	1-2263	1
18	Lower Platen, 16 x 20	2-1029	1
19	Silicone Pad 16 x 20, Blue	1-2136	1
20	Proximity Switch	1-1211	1
21	Magnet, Slotted	1-1219	1
22	Circuit Breaker, 20 Amp	1-1331	1
23	Roller Bearing 6002	1-2281	1
24	Grommet 5/16	1-2285	1
25	Bearing, double shielded 6900	1-2280	1
26	Nylok Nut 3/8-16	1-2301	1
27	Adapter Plate	3-1336	1
28	Quick Release Pin	1-2215	1
29	Flange bushing 1"	1-2282	1
30	C-clip	1-2286	1
31	Main Spindle Washer	1-2287	1
32	Hand Retractable Plunger	1-2288	1
33	Needle Bearing 1/2"	1-2289	1
34	Thermostat	1-2076	2
35	Guide Tube	1-2290	1
36	Pedestal Stand Assembly	1-2291	1
37	Self Leveling Stem Caster	1-2262	4
38	Foot Pedal Assembly	1-2305	1
39	E/P Regulator	1-2293	1
40	Drive Sprocket	1-2306	1
41	Chain	1-2307	1
42	Rotary Actuator	1-2296	1
43	Mini Regulator	1-2297	1
44	Print Valve	1-2298	1
45	Swing Valve	1-2299	1
46	Air Filter	1-1215	1
47	IEC Inlet	1-1759	1
48	Spanner Nut	2-1006-95	1
49	Nord Lok Washer	2-1006-94	1
50	Shock Absorber	1-2300	1
51	Probe	1-1272-1	1
52	Shock Stop Plate	1-2302	1
53	Roll Pin 3/8"	1-1018-1	1
54	Table Top Base	1-2324	1

■ Stand Model Only

■ Table Top Model Only

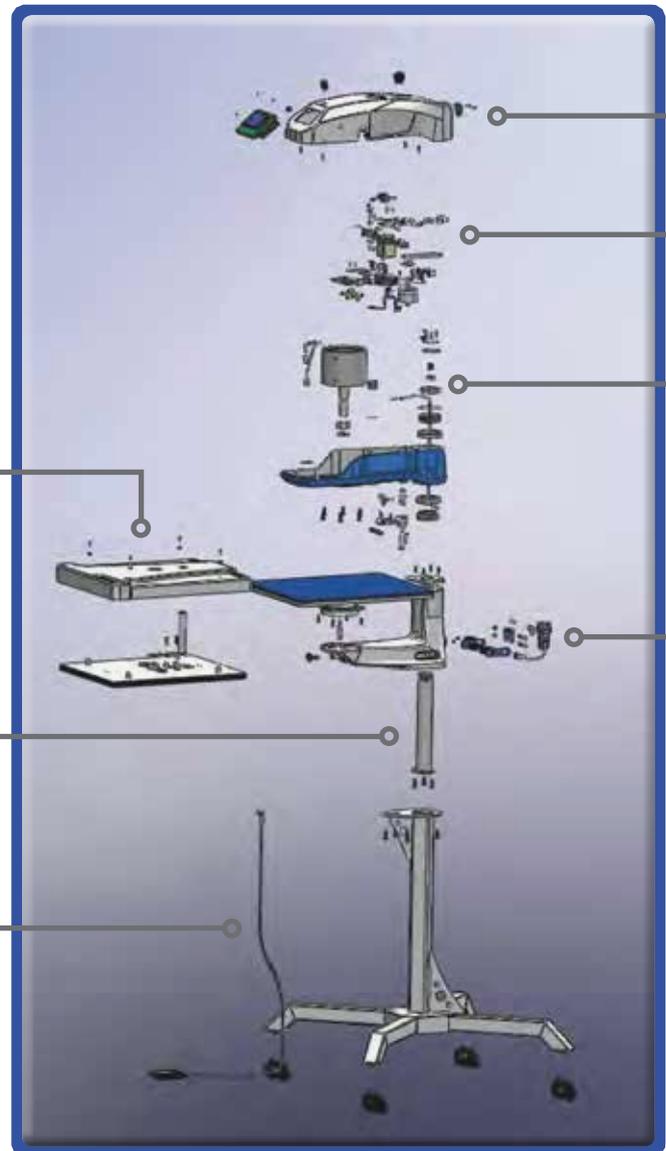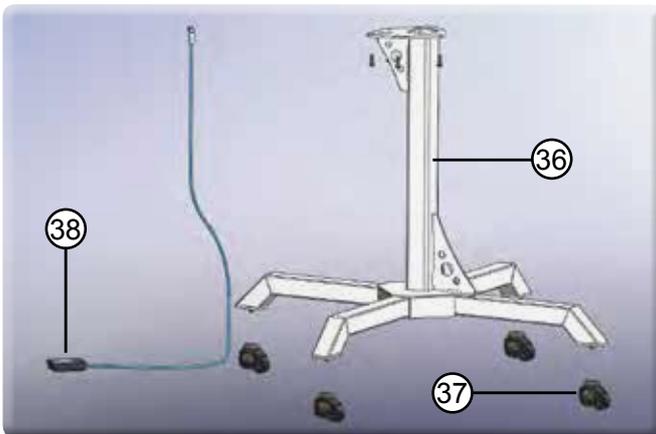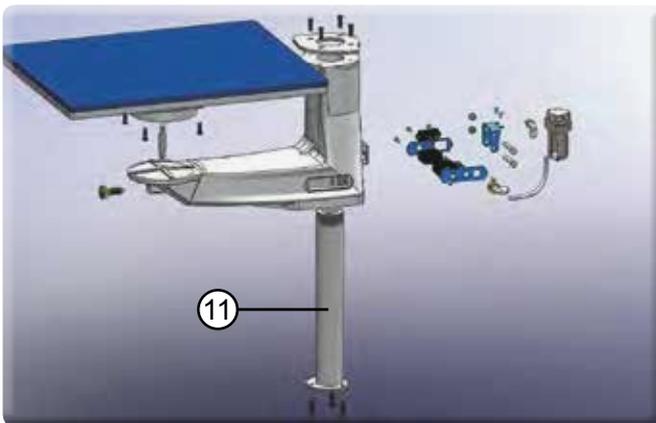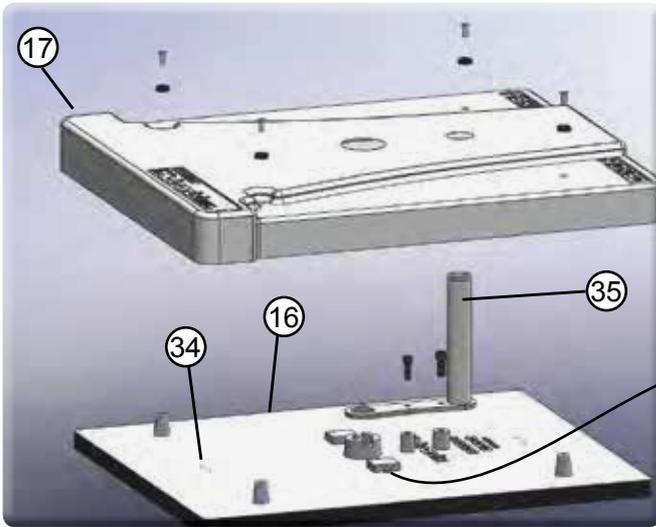

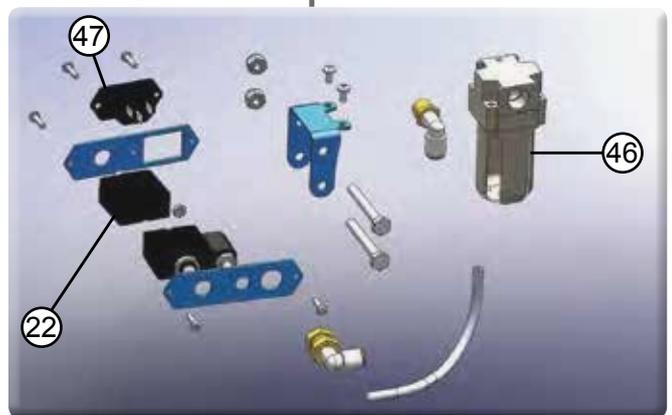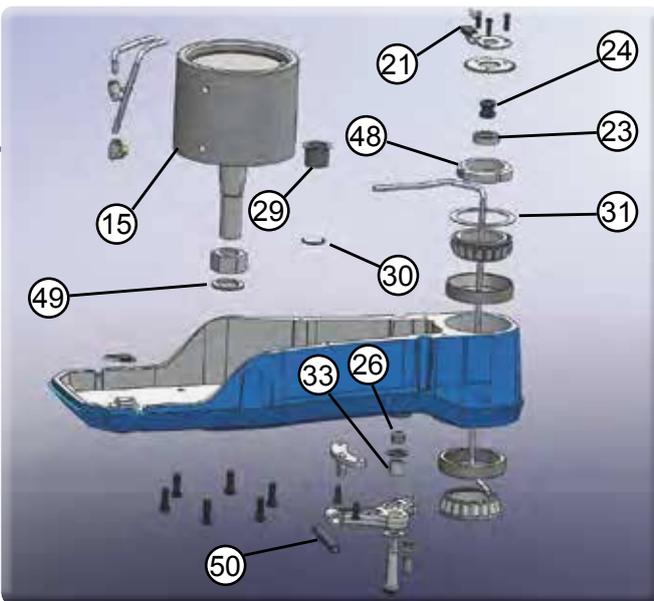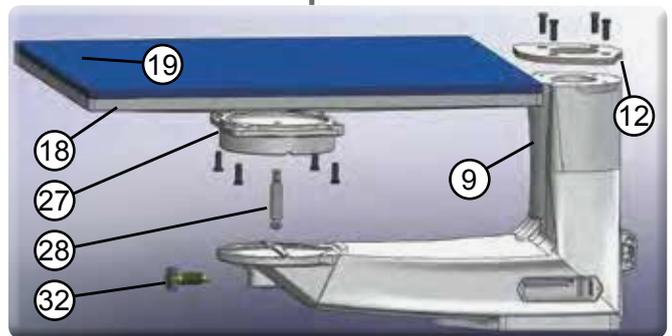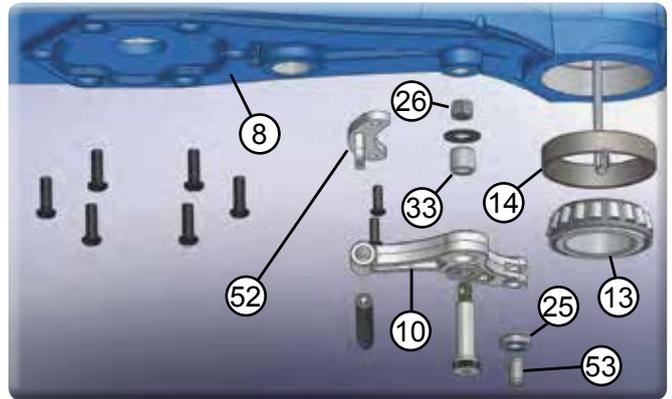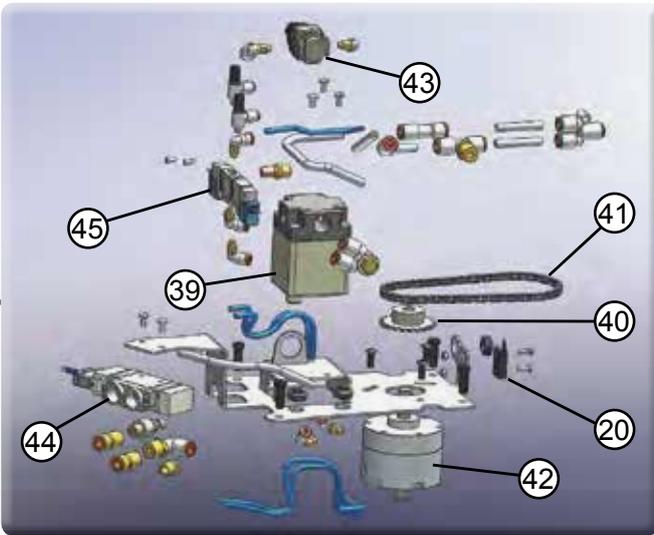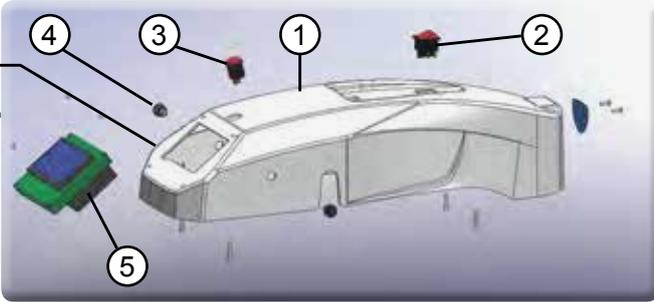

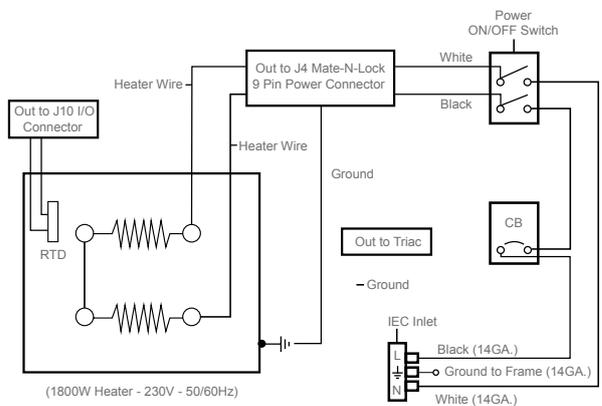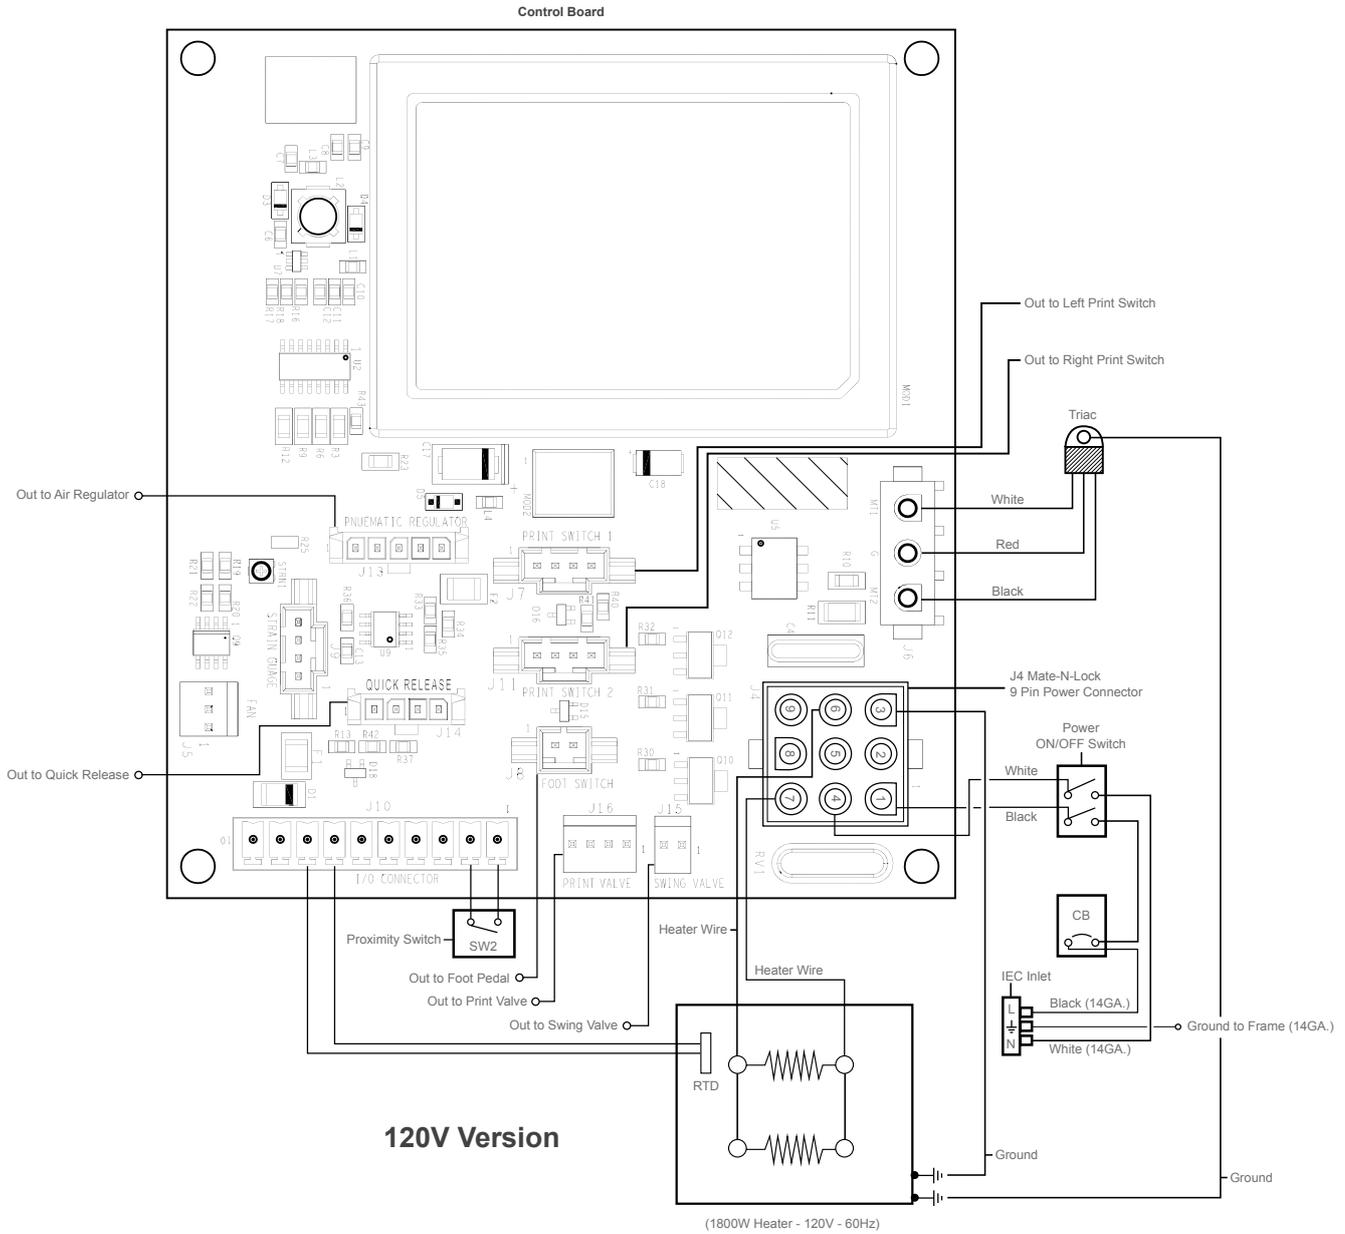

**EC conformance explanation:**

For the purposes of the EC-Machine Guideline 98/37EU, Appendix 2A and the EC Low Voltage directive to 73/23 European Economic Community as well as the EC EMV-guideline 89/336. For the manufacturer STAHL'S' Hotronix Division, we state as European Commissioners, that our product:

A Transfer Press for ironing of thermo application.

Model: Hotronix® Air Fusion™

The product supplied corresponds to the following appropriate regulations:

EMC Directive (2004/108/EC) & Low voltage Directive (2006/95/EC)

Applied Harmonized norms


EN 55011:2007	EN 61000-4-2:1995	EN 61000-4-6:1996
EN 61000-3-2:2006	EN 61000-4-3:2006	EN 61000-4-8:1993
EN 61000-3-3:1995	EN 61000-4-4:2004	EN 61000-4-11:2004
EN 61000-6-1:2007	EN 61000-4-5:2006	
IEC 60335-1:2001	IEC 60335-2-44:2001	



It is possible that not all the listed norms apply to the above mentioned product.

STAHL'S' Europe GmbH

(Frank Brücker, Chief Executive STAHL'S' Europe GmbH)

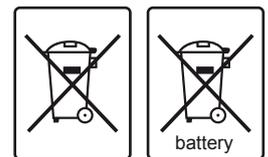

**WEE and RoHS Symbols**

STAHL'S' Europe GmbH will take back ALL heat press machines FREE OF CHARGE (inside the EU) that have been manufactured by them, even those sold prior to the date stated above, subject to the heat press machine being delivered to them at the owners costs.

STAHL'S' Europe GmbH will break down the heat press machine and ensure that all recyclable parts are correctly recycled, and non-recyclable parts will be disposed of in accordance with legal requirements. In an effort to make such transaction as smooth to customers as is possible, and to ensure that all STAHL'S' heat presses are identifiable, all heat press machines supplied by STAHL'S' Europe GmbH will have the logo/brand of STAHL'S' Hotronix clearly marked upon them.

**Contact:**

STAHL'S' Europe GmbH, Dieselstraße 62, 66763 Dillingen, Germany

Telefon: +49 (0) 68 31/97 33-0, Fax: +49 (0) 68 31/97 33 45, [www.stahls.de](http://www.stahls.de), [info@stahls.de](mailto:info@stahls.de)

## **Warranty Policy**

STAHL'S Europe GmbH provides the following warranty for the Hotronix® Fusion, subject to the following terms:

### **Duration**

The warranty period of 2 years commences from the date of receipt by the buyer of the heat press machine, which can be verified by the invoice or similar documents. The warranty does not cover any damage caused by normal wear and tear.

### **Repair**

If any parts are found to be defective, despite proper use, authorised use and not as a result of fair wear and tear, within the warranty period, then they will be replaced or repaired without question provided that STAHL'S Europe GmbH have been informed of any such claim in writing within one week of the occurrence of the failure. The terms and conditions of the commercial transaction are specifically excluded from this warranty, especially §§377 et.seq. HGB. Following any claim under the warranty, the warranty period will not be extended for either the heat press machine or for any replaced parts. Any exchanged parts will be the property of STAHL'S Europe GmbH. No charge will be made for any labour or components for any claim under the warranty. STAHL'S Europe GmbH operates a "bring in" guarantee for the first six months from the date of the purchase, under which all delivery and return costs will be borne by STAHL'S Europe GmbH. After the first six months from the date of purchase, all delivery and return costs will be borne by the customer.

### **Rectification**

Initially the customer's rights are limited to repair by STAHL'S Europe GmbH. Should the repair or remedial works finally fail, it will become the customer's right according to §462 BGB to receive a payment reduction, or to withdraw from the contract. In every case, any further claim would be excluded, especially indemnity claims (including consequential damages) and those resulting from defects, unless it can be proven that STAHL'S Europe GmbH acted intentionally, grossly negligently, or there are requirements according to §463 BGB.

### **Returns**

Goods may only be returned with express written authorisation from STAHL'S Europe GmbH. Customers must ensure that the heat transfer machine is properly fixed to the supplied wooden panel, and returned in the original carton, which must include the contact details of the sender, together with details of any failure which requires remedying. STAHL'S Europe GmbH will not be liable for any damages howsoever caused during transportation as a result of improper packaging.

### **Acceptance of Returned machines manufactured by STAHL'S for disposal**

STAHL'S Europe GmbH agrees to accept the return of all heat press machines manufactured by STAHL'S or with their genuine trademark for Free of Charge disposal, subject to the costs of delivery to STAHL'S Europe GmbH being borne by the sender. WEEE DE 54539730.

### **Packaging**

The original carton (box), packaging and wooden transport panel must be retained for any future transportation of the heat press machine.

### **Circuit Breaker**

If the circuit breaker should become dislodged, it can easily be reinstated after the heat press machine has cooled down. It is recommended to try and eliminate the source of any failure by using the error checklist.

### **Set Up**

It is important that the heat press machine is fixed securely to your worktop. To set up the press, it is necessary to fully open the press, and place the substrate that is to be printed flat on the lower platen. If the press is not fully open, there is a risk of being burnt. Always follow the supplied instructions for printing for every respective material.